 


MOVIES/VIDEO ON DEMAND (VOD)

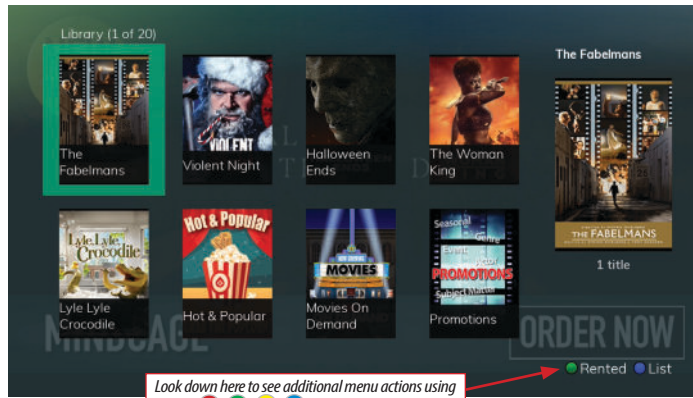

Choose popular movies and events as well as FREE On Demand titles available with your service level. To purchase a new VOD event:

1. Select **ON DEMAND** on your remote. The Library Main Screen appears. Select the library you'd like to choose from.
2. Select your event.
3. Guide will show title, price, description, rating and length, as well as how long you have to watch it.
To view a trailer for the event, select **PREVIEW**
To purchase, select **RENT**.
4. The Purchase Information Screen will appear.
You may choose to share the event with the rest of your whole home group or just on this TV.
5. Your event should begin playing. Press **EXIT** to return to previous channel.



Easy Programming without a Device Code

1. Manually turn on the **DEVICE** (TV, DVD, VCR, Audio) you want to setup on the remote control.
2. Press that device's button; it will blink once. Then press and hold **SETUP** until the device button blinks twice.
3. On the number pad, type **9 9 1**. The device's button will blink twice.
4. Aim the remote at the device and press **POWER** once.
5. Press and release the **CH+** button repeatedly. **STOP** when the device turns off.
6. Press **POWER**. The device should turn on. If it does, press **SETUP** to lock in the code. The device button will blink twice to indicate the code is saved.
7. If device does not turn on after pressing **POWER** in step 6, slowly press and release **CH-** to go back through the codes. Press **SETUP** when the TV turns on. The device button will blink twice to indicate the code is saved.

USING YOUR Remote Control & On-Screen Guide

+ RESTART & CATCH-UP AND ON-SCREEN APPS

USING Advanced DVR & MyTVs App

On Demand & Pay-Per-View

NOTE: DVR and On Demand not applicable with Business Class and Hospitality subscriptions



Take control

Our powerful set-top boxes with innovative features, empower you to enjoy entertainment on your terms with MPW TV.



3205 Cedar Street • Muscatine, IA 52761 • 563.263.2631 • mpw.org

042826

Control the Remote

DEVICE SELECTOR TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices. Select device.

SETUP

Use for programming sequences of devices controlled by the remote.

SKIP FORWARD, SKIP BACK, REW, PLAY, FFWD, STOP, PAUSE, RECORD

In STB mode, these control the DVR functions. In other modes, these can control DVD Player or VCR.

MENU

Displays the menu.

GUIDE

Opens the Channel Guide.

DAY +/-

Jump ahead or back one day in the Interactive Program Guide

RED, GREEN, YELLOW, BLUE

Look for on-screen prompts and use colors to access additional features.

VOL +/-

Raise or lower the volume.

MUTE

Turn the sound off or on.

FAV

View your favorite channels.

CLOSED CAPTIONING

Press # button to turn on and cycle through Closed Captioning (CC) options. On the large button remote, this is labeled CC.

*ASPECT RATIO

Temporarily change the conversion mode from Original Size or Fit to Screen.

Input

In TV control mode (top buttons), **Input** will change the TV's input to the device you are controlling.

* If available

POWER

Turn on/off a selected device.

STB

Select to access Set-Top Box features

LIVE

Return to watching live TV.

LIST

Display a list of recorded, future and series rules on your DVR.

INFO

Display the current channel and program information. Press again for more detail.

BROWSE, SEARCH, ARROW and OK

Navigate and select onscreen choices.

EXIT

Exit the current screen.

PAGE +/- in lists and Interactive Guide Program.

CHANNEL +/-

Changes to the next higher or lower channel.

ON DEMAND

Access video on demand services.

LAST

Recall the last channel or option.

NUMBER KEYS (0-9)

Directly select a channel or enter options.

MyTVs App

Smartphones & Tablets can be used as a spare remote at home, as well as to manage your DVR from anywhere!

 


For assistance with TV set up, operation and troubleshooting, contact MPW HelpDesk at 563.263.2631, Option 2

USING THE CHANNEL GUIDE

Press **GUIDE** to display information at the top about the program you are tuned to.

Programs on other channels show at the bottom. A **BLUE ARROW BEFORE** the title indicates it started prior to the current time slot. A **BLUE ARROW AFTER** indicates it continues past the last time slot showing. Programs scheduled for recording will be marked with a **RED CIRCLE**.

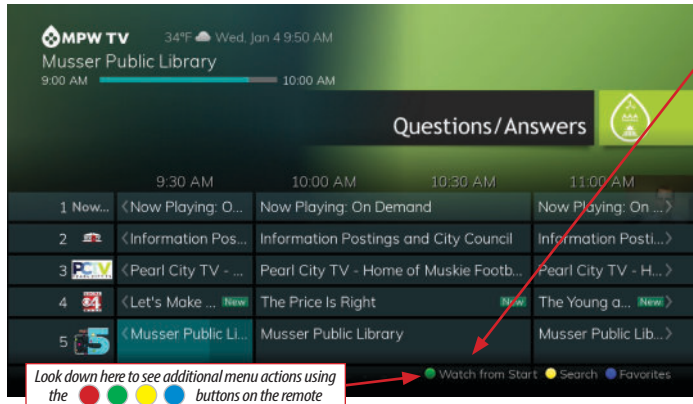

While in the Guide:

Use the **UP/DOWN ARROW** to move through the guide one channel at a time. As you do, a description of the highlighted program will display at the top.



Press **CH +** or **CH -** to scroll through channels more quickly.



Press **PG +** or **PG -** to move through the guide one page at a time.



Press **DAY +** or **DAY -** to move through the guide a full 24 hours.



You cannot use the DAY - button to go back to programs that have already aired, but you can use it to page back if you've moved ahead in the guide.

Press the **SKIP BACK** button to go back one page in the guide.

 


If there was a program you missed, you could search for other programs of the same name and schedule the DVR to record the program.

If you press the **GUIDE** button a second time, you can view the Guide and current program in a different format.



To browse through the guide using a **FAVORITES LIST**, press the **BLUE** button or the **FAV** button. The list name will appear at the bottom of the screen.

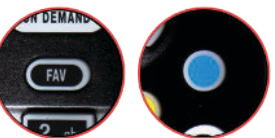

Keep pushing the **BLUE** button to scroll through the different **FAVORITES LISTS**.

*Events marked with the green **new** symbol signify a new episode of the program.*

*To exit the guide, press the **GUIDE** button a third time or press the **EXIT** button.*



RESTART and CATCH UP

Programs that can be restarted from the beginning will have a footnote in the lower right of the guide. Press the **GREEN** button on your remote to restart the program from the beginning. Restart works whether you have DVR enabled or not.

CATCH UP is a companion feature that allows you to view select programs from earlier in the week. To access, press **ON DEMAND**, then select the **Catch Up** folder. Programs are saved for 72 hours from airing.



SEE WHAT'S ON TV NOW

OK BUTTON

Press **OK** to see what is playing currently.

NOTE: Now Playing window will also provide weather, date and time



INFO BUTTON

Press **INFO** to see a description of the current program at the top of the screen.

If watching live, press the **RIGHT/LEFT ARROW** to view what is showing later on the current channel, or press the **UP/DOWN ARROW** to view what is showing on another channel.

Press **DAY +** or **DAY -** to see what is on this channel 24 hours from now.



 
BROWSE BUTTON

BROWSE (right arrow), shows information similarly and can be controlled with **RIGHT/LEFT ARROW**, **UP/DOWN ARROW** and **DAY +** or **DAY -**

WHAT'S HOT

The **WHAT'S HOT** app shows you the most popular programs in the Muscatine area — in **real** time! To access, just press **YELLOW** to view the apps list, then select What's Hot.

You can also access What's Hot through the **MAIN MENU** (see below).

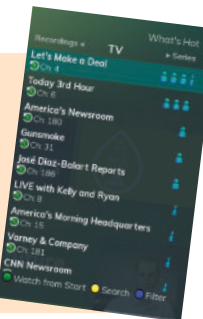

MAIN MENU

Along with being able to access almost all functions with specific buttons on the remote control, you can also get into these controls through the **MAIN MENU**.



Open the Main Menu by pressing the **MENU** button on the remote control.

Once inside, you'll find additional options:

- Under **TV**, you can customize the appearance of the guide, see what's playing now, initiate a search, and access the **WHAT'S HOT** app (see above).

ADVANCED DVR CONTROLS

If you have subscribed to optional Advanced DVR Service, your remote control offers enhanced remote control buttons that function similarly to DVD controls in addition to standard remote capabilities. **Here's what each button does:**



LIST Select to see a list of recorded programs. Press the **LIST** button a second time to see what is scheduled to be recorded. Press **LIST** a third time to access your Series Rules.



LIVE Select to return to the current part of a live broadcast.



SKIP FORWARD Skip forward 30 seconds while watching a recording or, if already paused, skip forward on a live TV program.



SKIP BACK Skip backward ten seconds while watching a recording or while watching live TV.



PLAY Begin or resume watching a recording. Also display/remove the status bar.



FAST FORWARD Fast forward through parts of a recording. Press multiple times to go forward faster.



RECORD Record a program you are currently watching. When pressed, you will see options to record one time, a series, or set a reminder.



PAUSE Pause the program you are currently watching. While paused, the Fast-Forward button will play the program frame by frame in slow motion.



STOP Stop watching a recording or stop a recording that is in progress.



REWIND Rewind through parts of a recording. Press multiple times to rewind faster.



GUIDE Access the program Guide. Press a second time for alternate view.



ARROWS/BROWSE/SEARCH/OK Press to navigate through the guides, menu options or to make selections.

Using FOLDERS

With **FOLDERS**, you can organize your recordings any way you choose.

*We recommend you **CREATE** your desired folders **BEFORE** saving your first recording to make them easier to find later.*

Press **LIST**, then **BLUE** to create a **NEW FOLDER**.

*You'll then be prompted to name the folder. Enter a name and select **SUBMIT**. Repeat as needed to create folders for each family member (Dad, Mom, Kids, Series Title, Movie Type, or whatever — folder names are up to you.*

Then, any time you are setting a new **ONE TIME** or **SERIES** recording, **ARROW DOWN** to the folder line and use **ARROW RIGHT/LEFT** to select one of your pre-created folders. Then select **OK**.

*Once the recording is complete, it will be placed in the designated folder and you can access your folders by pressing **LIST**. You can also access them by pressing **MENU**, then selecting **RECORDINGS**.*

 
Never miss a show with

Advanced DVR - only \$8.00/mo!

- Call 263-2631 to sign up for our current DVR promotion!
- Program any set top box in your home to record, play, pause and rewind up to 8 programs
- Set a single recording or record an entire series
- Organize your content in folders and set-up recordings with the MyTV's App
- Includes 500 GB of secure storage. Up to 2000 GB of storage is available in 500 GB increments for \$1.99/mo



FREE DOWNLOAD FROM YOUR APP STORE

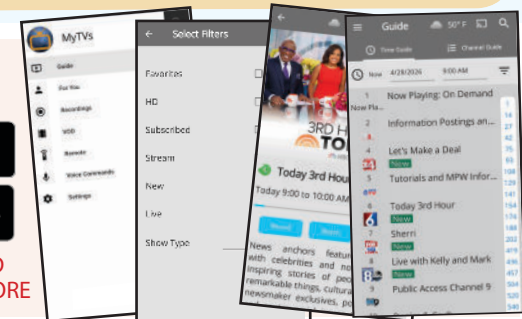

- Under **RECORDINGS** see a list of current, future and series recordings.
- Under **ON DEMAND**, view the Library, your rentals, and search titles.
- Under **MESSAGES**, view important system messages from MPW.
- Under **APPS**, find out **WHAT'S HOT** (the most viewed programs right now in Muscatine!), get access to the **LOCAL WEATHER** forecast and radar, play **GAMES** on your TV.
- Under **SETTINGS**, set your preferences for **DISPLAY**, **FAVORITES**, **GUIDE** appearance, **RECORDING** parameters, and **PARENTAL CONTROLS**, where you can change and set viewing limits.

ACCESSING PARENTAL CONTROLS VIA MENU

